

# **Digital Photo Frame** **7" screen**

## **Multimedia features**

### **AV Out**

#### User Guide


Ver. 1108A

Why pay more to buy larger screen Digital Photo Frames when our 7" screen multimedia Digital Photo Frames all have the AV out feature to play and to enjoy maximum entertainment pleasure through the TV screen or any other display devices. It takes a simple setup as shown hereunder or see the on-line demo; <http://lucasind.com/techissues.htm>

Identify first the channel of TV screen which is ready to accept input of images, audio and video play, connect the Digital Photo Frame with the provided AV cord.

### [A. Setup]

Using the remote control, select from the Main Menu the Setting feature, there are 5 sub-menu for modes of functions in the cascades as described below.

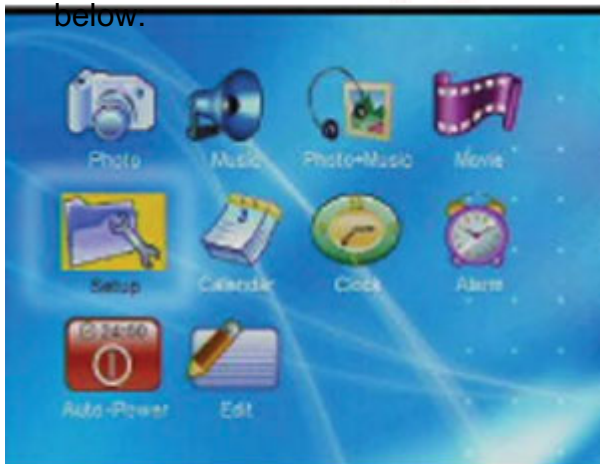


**Diagram2**



**Diagram8**

1. Select the 3<sup>rd</sup> mode of function, wherein choose the TV standard and select Auto (Diagram8, 8A)

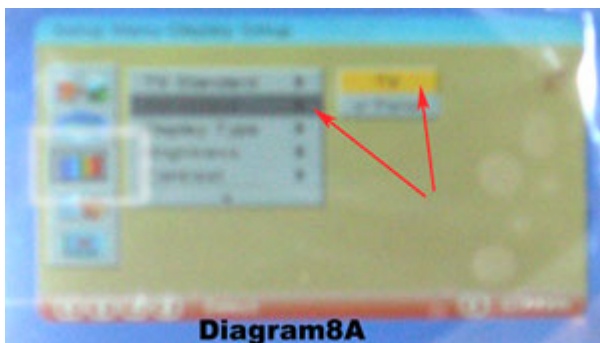

**Diagram8A**



**Diagram8B**

2. Select the AV Out and choose TV, the TV screen will pop-up the same screen whereas the Digital Photo Frame screen will close (Diagram8B)

3. Continue with the remote control to select the Exit, which is now showing on the TV screen, and press the Exit (Diagram8C)
4. The screen will show the Main Menu again (Diagram8D).



## [B. Play]

Use the remote control to select from the Main Menu, now showing on the TV screen

- Photo, press the icon (the TV screen will show the photos (Diagram8D, 8E))



- Music, press the icon (the TV screen will show the list of the songs (Diagram8F))

- Photo+Music, press the icon (the TV screen will play automatically the photos with the background music from the stored songs)
- Movie, press the icon (the TV screen will show the list of the movie/videos stored), select the one to play (Diagram8G, 8H)



- end -