

Digital Photo Frame

(Electronic Photo Album)

7" screen

User Guide

Ver. 0109 HI1018A(M2)



Photo+calendar+clock

This is a 7" screen LCD Digital Photo Frame, that you can view your favourite photos as simple and easy like a photo album. The product has been tested and is in compliance with the top quality assurance. For on-line web technical assistance, please visit <http://lucasind.com/techissues.htm>.



What are inside

1. The Digital Photo Frame -- the unit
2. Stand
3. Power cord, AC100~240V, 50/60Hz, DC 5V -1.5A
4. User guide
5. SD memory card (optional)



Display outlook

The unit can be display either horizontally or vertically, on the desk or on the wall





Power on and off

With the power cord provided, plug in to turn on and unplug to turn off.



Opening Page



Calendar + Clock

By factory setting, a calendar with an analog clock will display when being power connected. Insert the appropriate memory card, or USB Flash Disk into respective slot, the unit will automatically display the stored photos.

Important: Recommend to unplug the connection from power energy if not intended to play for a long time.



Panel operation

5 intuitive buttons:



- Button (1) -- press to play, to pause, to confirm to turn-off or to turn-on. (Recommend to disconnect from power energy if not playable within the next 12 hours)
- Button (2) -- press to go back to previous photo display, or to decrease in selecting calendar, time or interval laps. Press longer to move backward.
- Button (3) -- press to go to next photo display, or to increase in selecting calendar, time or interval laps. Press longer to move forward.
- Button (4) -- press to leave current selection, when showing photo, press to rotate the photo to 90 degrees, 180 degrees, 270 degrees, finally back


to normal. Press longer, go into panorama view of 6 photos, details and sequences. Press (2) or (3) for the previous and next sets of 6 photos. Press (1) to play the selected photo, or press (5) to resume individual photo playing.



- Button (5) -- press to go into two types of setup, namely the empty setup and the full setup, or leave. Press longer, to switch to 3in1 display mode (photo+calendar+clock) or vice versa.

Setup (empty setup, no memory card, no USB disk inside)

- Press (1) to go into empty setup
A setup menu screen will display,
Select mode, press '1' to choose Photo / Clock
(there is no effect when no photos are playing)
Set time/date, press '1' to choose year – month – day
hour: minutes

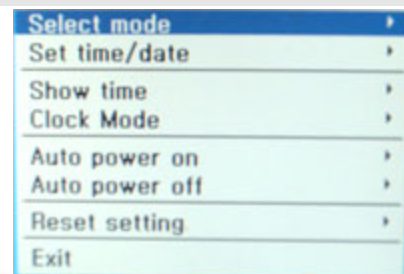

When selection is complete and done, remember to press '1' to confirm setting. Then press '4' to leave.

Show time, this will show the time when playing the photos, press '1' to choose Off / On, press '1' to select until a (√) is seen to confirm. Press '4' to leave.

Clock Mode, this will show the following mode if selected, when playing the photos within the same screen.

- Calendar + Analog Clock
- Digital Clock
- Analog Clock

press 'Play' to select until a (√) is seen to confirm. Press 'Leave'.

Auto power on, this will turn on the unit from stand-by or idle mode provided the power cord is connected to energy, press 'Next' or 'Previous' to select Disable / Enable then press 'Next' longer to move to select Hour (0~23) : Minutes (00~59)

Auto power off, this will turn off the unit to stand-by or idle mode without unplug the power cord.

Reset setting, this will refresh the original factory settings

Exit, press 'Play' to select to go to Start up screen of a Calendar with a Clock when no photos are playing.



Setup (full setup, A memory card, and/or an USB disk inserted inside)

- With a SD/MMC memory card or an USB Flash Disk stored with photos in JPG format, press (1) to go into full setup.

A full setup menu screen will display,

Select card, press (1) to select USB disk (if inserted) or to select SD/MMC card until a (✓) is seen to confirm. Press '4' to leave.

Select mode, press (1) to select 'Photo' or 'Clock' until a (✓) is seen to confirm. Press '4' to leave.

Language, (8 countries, English / French / Spanish / German / Italian /Portuguese/Russian/Polish), press (1) to select until a (✓) is seen to confirm. Press '4' to leave.

Slide speed, (8 intervals, 5 seconds / 15 seconds / 30 seconds / 1 minute / 5 minutes / 15 minutes / 30 minutes / 1 hour) press (2) or (3) to move around and to press (1) to select until a (✓) is seen to confirm. Press '4' to leave.

Photo Effect, press (2) or (3) to move up and down. Press (1) to select until a (✓) is seen to confirm. Press '4' to leave.


- Color – photo in original photo color
- Mono – photo in grey color
- Sepia – photo in special faded nostalgic color

Photo mode, press (2) or (3) to move up and down. Press (1) to select until a (✓) is seen to confirm. Press '4' to leave.

- Auto fit
- Full
- Pan scan

Reset setting, this will refresh the original factory settings

Exit, press (1) to select to go to photo displaying screen, either individual photo by slide show or in a 3in1 display mode of screen (Calendar +Clock+photo).

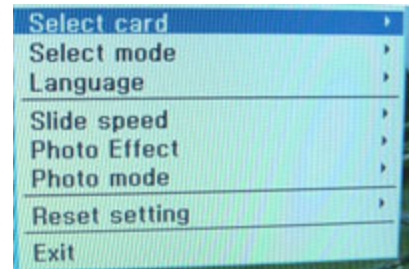



Technical Specs

Screen type	TFT LCD
Panel Size	7 inches
Resolution	480 x 234
Brightness	350 cd/m ²
Contrast	300
Viewing Angle	60/60/50/40 (CR=10)
Response Time	30ms
Screen Size Mode	16 : 9 and 4:3
Picture Rotation	270 degrees
File Format Type	JPEG
Accept external memory (memory card & USB)	Secure Digital (SD), Multimedia Card (MMC), Memory Stick (MS) and USB Flash Disk (U disk/thumb drive)
Max. Photo Size	10 megapixels
Power Requirement	5V DC
Power Consumption	1~1.5W
Operating Temperature	-20~65 degrees centigrade
Storage Temperature	-30~75 degrees centigrade
Dimensions	23x17x2.5 cm
Weight	390 gr

- end -