


Quick Start guide

VisCORDER, Wireless reception system (LAV039)

We do not print user guide booklet for eco-friendly, please see footnote herebelow

A) Package:

1. Main device (powered by 6x2A batteries, not included)
2. Bell device (powered by 3x2A batteries, not included)

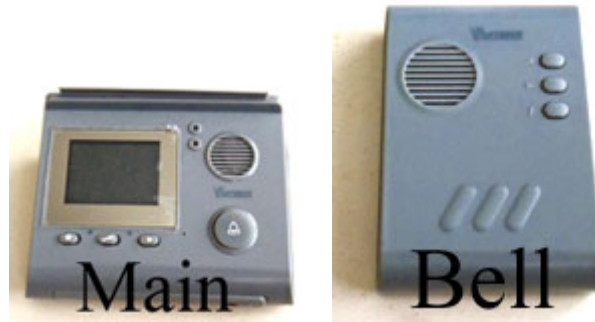

3. Accessories

- a. 1 Stainless steel back stand (for desktop or counter)
- b. 4 screws and rubber inserts (for door or wall mount)
- c. Polyethylene cover (optional, with or without for heavy rainy outdoor unsheltered area)



B) Start up:

1. Inert new batteries into the main device and the bell device
2. Activate the system by hitting the big round button (bell symbol) on the main device, the bell device should alarm immediately

C) Self Test:

1. Hit the bell symbol button on the main device, the bell device alarms
2. Watch the screen, it should display a request text and the voice hint, say something to record. Then retrieve to view.

D) Default setting:

Password: designated

Voice hint and text display: English (9 other languages selectable)

- Customized setting and user manual, please refer accompanied pdf file, it is downloadable on-line, <http://lucasind.com/techissues.htm#vumannual>
- Operating demo clip on-line, and applicable scenario examples <http://lucasind.com/vwhere.htm>
- Mount up demo clip on-line and tech specs, <http://lucasind.com/vspec.htm>